

**Johnson Controls  
Unitary Products**

**Steam  
Humidifier**



**Model 8000 Residential Steam Humidifier  
Owner's Manual**

**Includes Safety & Operating Instructions  
and Warranty Information**

**READ AND SAVE THESE INSTRUCTIONS**

## TABLE OF CONTENTS

Safety Cautions .....	2
Introduction .....	4
Principles of Operation .....	4
Sequence of Operation .....	5
Installation Options and Effect of Water Characteristics.....	6
Operating Modes .....	6
Display Panel .....	7
Humidifier Control & Operating Instructions.....	9
Check the Humidifier Operation .....	10
Additional Information.....	10
Maintenance .....	10
Limited Warranty .....	12

## SAFETY CAUTIONS

### CAUTION

#### ATTENTION INSTALLER

Read this manual before installing. This product must be installed by qualified HVAC and electrical contractors and in compliance with local, state, federal, and governing codes. Improper installation can cause property damage, severe personal injury, or death as a result of electric shock, burns, or fire.

#### Read all cautions and instructions.

Read this manual before performing service or maintenance procedures on any part of the system. Failure to follow all cautions and instructions could produce the hazardous situations described, resulting in property damage, personal injury, or death.

Failure to follow the instructions in this manual can cause moisture to accumulate, which can cause damage to structure and furnishings.

### CAUTION

#### HOT SURFACES AND HOT WATER

This steam humidification system has extremely hot surfaces. Water in steam canister, steam pipes, and dispersion tube can be as hot as 212°F (100°C). Discharged steam is not visible. Contact with hot surfaces, discharged hot water, or air into which steam has been discharged can cause severe personal injury. To avoid severe burns, follow procedures in this manual when performing service or maintenance procedures on any part of the system.

#### DISCONNECT ELECTRICAL POWER

Disconnect electrical power before installing supply wiring or performing service or maintenance procedures on any part of the humidification system. Failure to disconnect electrical power could result in fire, electrical shock, and other hazardous conditions. These hazardous conditions could cause property damage, personal injury, or death.

Contact with energized circuits can cause property damage, severe personal injury, or death as a result of electrical shock or fire. Do not remove access panels until electrical power is disconnected.

Follow the shutdown procedure in this manual before performing service or maintenance procedures on any part of the system.

#### ELECTRICAL SHOCK HAZARD

If the humidifier starts up responding to a call for humidity during maintenance, severe bodily injury or death from electrical shock could occur. Follow the procedures in this manual before performing service or maintenance procedures on this humidifier.

#### EXCESSIVE SUPPLY WATER PRESSURE

Supply water pressure greater than 120 psi may cause the humidifier to overflow.

#### SHARP EDGES

Sharp edges may cause serious injury from cuts. Use care when cutting plenum openings and handling ductwork.

#### EXCESS HUMIDITY

Do not set humidity higher than recommended. Condensation may cause damage.

## INTRODUCTION

Thank you for your recent steam humidifier purchase. We appreciate your business and are pleased to add your name to our growing list of customers. You have invested in the highest quality equipment available.

Your humidifier will require periodic maintenance to assure continued consistent performance. See page 10.

Please take a few minutes and read this booklet. This will familiarize you with the benefits you will receive from the humidifier and help you understand the routine maintenance that will be required.


**Replacement Model S1-8044 Steam Canisters are available from your installing contractor or from most other heating and air conditioning contractors in your area. Look in the Yellow Pages under Humidifying Apparatus or Heating & Air Conditioning Contractors.**

## PRINCIPLES OF OPERATION

The Steam Humidifier delivers humidity in the form of steam to the conditioned space via the HVAC system duct or optional Model S1-854Y Fan Pack. The humidifier generates steam by energizing two electrodes that extend into a canister of water. Current flowing between the electrodes causes the water to boil, creating steam. Water is introduced to the humidifier through a fill valve to a fill cup located in the top of the cabinet. The fill cup serves as an overflow reservoir and provides an air gap between the humidifier and water source. The steam canister is filled from the bottom. The canister is seated in a drain cup assembly which includes a drain valve. The drain and fill valves work together to maintain water level in the canister to deliver the rated steam capacity based on the electrical conductivity of the water and to temper drain water. See **Figure 1** for representation of fill and drain system and canister.

Steam is delivered into the airstream through a dispersion tube mounted in the HVAC system ductwork. Openings in the dispersion tube are fitted with "tubelets" which extend into the center of the tube. The design of the dispersion tube and tubelets distribute steam over a wide area in the duct and direct any condensed moisture back into the steam hose.

**FIGURE 1 – Fill and Drain System and Canister**

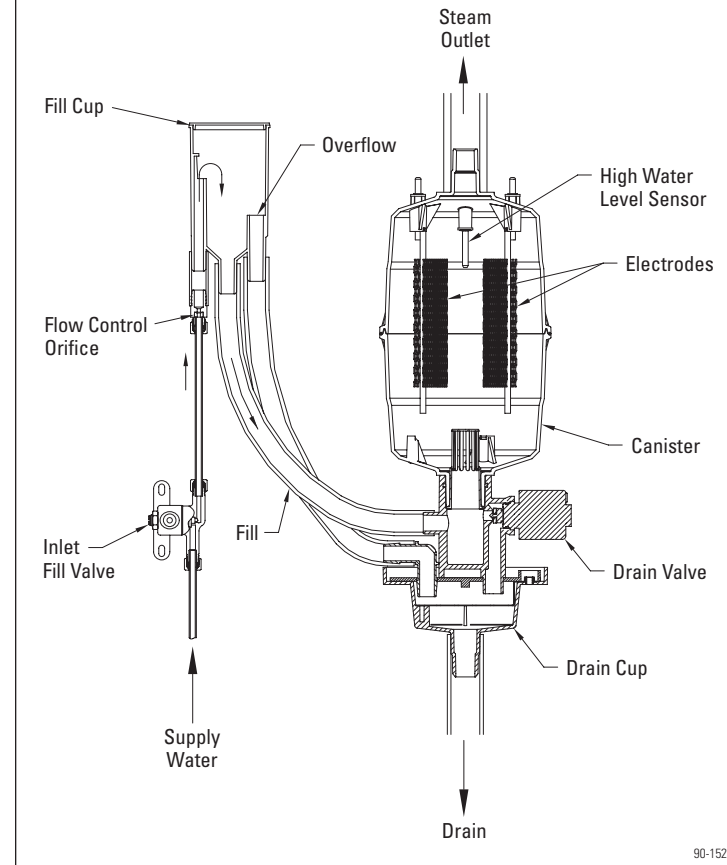

## SEQUENCE OF OPERATION

When the Humidifier Control detects humidity below the set point, and provided the humidifier is turned on and the indoor unit blower is operating, the internal controller in the humidifier energizes the electrodes and measures the current flowing through the water between them. The controller adjusts water level in the canister via a fill valve and a drain valve to maintain a constant current. The operating water level in the canister depends on the mineral content of the water which determines conductivity.

A relay is provided with the humidifier that will allow the control to turn on the indoor unit blower when a call is made for humidity.

## INSTALLATION OPTIONS AND EFFECT OF WATER CHARACTERISTICS

Your Steam Humidifier can be installed to operate using 120 Volts, 208 Volts or 240 Volts. The higher the voltage, the higher the potential output:

Voltage	Rated Output
120 Volts	4 lbs./hour (11.5 gallons/day maximum)
208 Volts	7 lbs./hour (20.5 gallons/day maximum)
240 Volts	8 lbs./hour (23.3 gallons/day maximum)

**It may take several days for the humidifier to reach rated capacity depending on the input voltage and the electrical conductivity of the water.** 120 volt systems take longer to reach rated capacity than 240 volt systems. The humidifier should always be plumbed to cold water but the water can be softened or unsoftened. "Hard" water, which has a high mineral content, and softened water generally has higher conductivity than naturally soft water. Systems plumbed to higher conductivity water will reach capacity sooner than systems plumbed to low conductivity water. As the humidifier operates, minerals build up in the canister, which increases the conductivity of the water. With a new canister, allowing the humidifier to operate continuously (along with the indoor unit blower) will allow it to reach rated capacity in the shortest amount of time.

## OPERATING MODES

When the humidifier is powered and turned on, the "On/Off" light is illuminated green.

When the canister is being filled or replenished with water, the "Fill" light illuminates green.

When the canister is being drained, the "Drain" light illuminates green.

During initial start up with a new canister, the humidifier may run through a series of fill/drain cycles until the conductivity of the water is in a range that allows normal operation. During this time, the "Steam" light illuminates green. If the humidifier cannot produce steam at the rated level after trying for 168 hours, the "Steam" light illuminates yellow. The humidifier continues to operate in this state until the rated output is reached.

The conductivity of naturally soft water, hard water, and softened water changes as the water heats up, but the internal controller adjusts the water level to maintain a nominal current between the electrodes. Over the life of the canister, minerals that build up on the electrodes will reduce their effective surface area and affect the resistance between them. The operating water level will increase with use until it reaches the high water

level probe. At that point, the "Service" light will flash red indicating that the canister needs to be replaced. The humidifier will continue to operate but with reduced output.

When the humidifier begins a drain cycle, the fill valve opens to introduce cold water into the canister. This is done to prevent hot water from entering the drain. The drain valve remains open for four minutes to allow all water to drain from the canister.

Any time power is disconnected or humidifier is turned off, the internal timer for start-up and drain cycles is reset.

If the humidifier has operated 168 hours without a drain cycle, the drain valve will open and drain the canister. Normal operation will continue.



If the humidifier is operating and a power failure occurs, once power is restored, the "On/Off" light will flash green for one minute, then the humidifier will turn on.

## END OF SEASON/PERIOD OF INACTIVITY SHUT-DOWN




If the humidifier does not receive a call to operate in 72 hours, the humidifier controller drains the canister. The drain light will remain on until there is a humidity call or 24 hours has elapsed. The humidifier will resume normal operation when a call for humidity is made.

## DISPLAY PANEL

TABLE 1 – Display Panel

Indicator	Light	Function
 On/Off	Off	Humidifier is turned off or not receiving power.
	Solid Green	Humidifier is turned on.
	Flashing Green	Humidifier is preparing to turn on. Occurs if power is disconnected, then restored with switch ON. Flashes for one minute.
 Fill	Solid Green	Normal Operation. Fill valve is energized allowing water to flow into canister via fill cup. (Does not illuminate when tempering water during drain cycle.)
	Flashing Green	Fill and Drain Valves are pulsing to dislodge mineral build-up in canister. Flashes 10 times in four seconds.
	Solid Red	Fault Mode. Indicates canister needs water but cannot fill. Humidifier shuts down. (Occurs if high water probe does not detect water after fill valve is energized for 40 minutes.)

**TABLE 1 – Display Panel (continued)**

Indicator	Light	Function
 <b>Steam</b>	<b>Solid Green</b>	Normal Operation. Humidistat is calling for steam and humidifier is operating.
	<b>Solid Yellow</b>	Humidifier is operating but is not delivering steam at rated capacity. Occurs if humidifier has operated for 168 hours at less than rated capacity due to low water conductivity. Light will turn green once water conductivity increases and humidifier is delivering rated capacity.
 <b>Drain</b>	<b>Flashing Green</b>	Humidifier is preparing to drain. (Fill valve is open tempering water in canister.) Occurs when humidifier is turned off, at end of season drain (72 hours with no operation) and during forced drain down (168 hours of operation with no drain activity.)
		Fill and Drain Valves are pulsing to dislodge mineral build-up in canister. Flashes 10 times in four seconds.
	<b>Solid Green</b>	Drain valve is energized and open, draining canister. Valve remains energized for four minutes.
 <b>Service</b>	<b>Flashing Red</b>	Canister has reached the end of its life and needs to be replaced. Occurs after humidifier has operated for at least 168 hours and for an additional 24 hours at a current level below 75% of the maximum operating current. Humidifier continues to operate, but at reduced capacity.
	<b>Solid Red</b>	Operational problem with humidifier. Humidifier shuts down. Occurs when unit detects over-current which can be caused by failure to drain or other system failures. Call your heating and air conditioning dealer for service.

## HUMIDIFIER CONTROL & OPERATING INSTRUCTIONS

The control provided with your humidifier is mounted either in your return air duct or on a wall in the living space. The control has a set of contacts which close when the RH is below the set point. That signal tells the humidifier to energize the electrodes in the canister to generate steam, provided the indoor unit blower is on. If the blower activation relay is installed, a call for humidity will turn on the indoor unit blower.

It is important to anticipate changes in outdoor temperature and adjust the setting accordingly to avoid excessive condensation when outdoor temperature is low. For example, with an outdoor temperature of 20°F the correct setting will be 35%. If the temperature is expected to fall to 0°F that evening, then merely reduce the setting to 25% several hours prior to the temperature change.

See **Table 2** for the recommended settings. These settings, which are based on years of research, represent a compromise between humidity levels that would be most desirable for comfort and humidity levels that are suitable for protection of your home and to avoid condensation on your windows. For example, a wintertime indoor humidity of 50% may be considered ideal for comfort, but unfortunately, it probably would result in condensation, which can cause damage to your home. Observing the recommended humidity levels on your Humidifier Control is an important safeguard. Condensation of water on the inside surface of windows in the form of fogging or frost is usually an indication of too much humidity. This same condensation can occur in other areas in your home, possibly resulting in damage.

**TABLE 2 – Outdoor Temperature/Indoor Relative Humidity**

Outside Temperature	Recommended RH
+40°F	45%
+30°F	40%
+20°F	35%
+10°F	30%
0°F	25%
-10°F	20%
-20°F	15%

## CHECK THE HUMIDIFIER OPERATION

Turn the control knob to the maximum RH setting. Make sure that the water saddle valve is open and that the humidifier is on. The indoor unit blower must be running for the humidifier to function. Once humidifier operation is verified, reduce the Humidifier Control setting to the recommended inside humidity, depending on the outside temperature.

**If using the automatic humidifier control model number S1-HUSTATAUT056, DO NOT LEAVE IN TEST MODE AS HUMIDIFIER WILL NOT OPERATE.**

## ADDITIONAL INFORMATION

Be sure to keep fireplace dampers closed when not in use. They provide an excellent escape route for heat, as well as humidity.

On occasion, indoor moisture producing activities such as clothes drying, cooking, showers, etc., may raise the humidity level higher than it should be, even though the humidifier is not operating. Telltale indications are condensation or frost on cold surfaces such as windows, doors, walls, etc. If such condensation persists for several hours, your home should be ventilated to dissipate the potentially damaging excess moisture.

## MAINTENANCE

**Turn humidifier off and allow humidifier to drain. Disconnect power before servicing.**

Inspect Humidifier at approximately 500 hour intervals or several times during the humidification season.

- Check system operation and inspect all plumbing connections and piping for signs of cracks or leaks.
- Inspect drain line to make sure it is not blocked and has constant downward slope. Clean or replace if necessary.
- Inspect steam hose to make sure it has no low spots and has constant upward slope from humidifier to dispersion tube in duct. If dispersion tube is mounted below humidifier, inspect drip tee drain.

## TO REPLACE THE CANISTER

Replace the canister annually and when prompted by the "Service" light. Use Model S1-8044 Canister.

1. Press On/Off switch to turn humidifier off. Humidifier will drain for four minutes.
2. Allow humidifier to drain. When the green "drain" LED stops flashing, disconnect main electrical power to humidifier.
3. Remove front panel.
4. Pull three wires off posts on top of canister. (Two large electrode conductors and one water level probe conductor.)
5. Loosen hose clamp at top of canister.
6. Slide hose off top of canister.
7. Slide canister up and out of drain assembly. Discard canister.
8. Remove o-ring from drain assembly using small screw driver.
9. Inspect drain assembly and remove any debris. See drain valve cleaning procedure in Installation & Maintenance manual.
10. Insert new o-ring into slot in drain assembly. (O-ring is provided with Model S1-8044 canister.) Dampen o-ring with water before inserting canister. Do not use oil, grease, or any lubricant besides water.
11. Make sure strainer is inserted into bottom of new canister.
12. Insert canister into drain assembly. Position canister with label facing outward.
13. Slip steam hose over top of canister and tighten hose clamp.
14. Reattach three wires to posts on top of canister. (Larger electrode conductors are interchangeable.)
15. Replace front panel.
16. Inspect drain line to make sure it is not blocked and has constant downward slope. Clean or replace if necessary.
17. Inspect steam hose to make sure it has no low spots and has constant upward slope from humidifier to dispersion tube in duct. If dispersion tube is mounted below humidifier, inspect drip tee drain.
18. Restore electrical power to humidifier.
19. Turn humidifier on and verify green On/Off light is illuminated.
20. See Start-up procedure in Installation, Operation & Maintenance manual.

## TO SERVICE FILL VALVE

If water flow from fill valve is restricted, disconnect inlet fitting and remove in-line strainer using small screw from inlet port. Clean or replace strainer.

# LIMITED WARRANTY

UPG warrants this product to be free from defects in factory workmanship and material under normal use and service and will, at its option, repair or replace any parts that prove to have such defects according to the terms outlined on this warranty. This warranty covers only the equipment described by the Product Model Number and Serial Number listed on the Warranty Registration Card.

For your benefit and protection, return the Warranty Registration Card to UPG promptly after installation. This will initiate the warranty period and allow us to contact you, should it become necessary. In the absence of a recorded Warranty Registration Card, the warranty period will begin upon product shipment from UPG.

This warranty extends only to the original consumer purchaser and is non-transferable. For this warranty to apply, the product must be installed according to UPG recommendations and specifications, and in accordance with all local, state, and national codes; and the product must not be removed from its place of original installation. The warranty period for repair or replacement parts provided hereunder shall not exceed beyond the warranty period stated below.

<b>HUMIDIFIERS AND AIR CLEANERS</b>
<b>PARTS</b>
5 yrs

UPG strongly recommends regular periodic preventative maintenance on this equipment. The person most familiar with the equipment in your HVAC system is a UPG dealer. The UPG dealer can ensure your maintenance program meets the conditions of the "UPG Warranty," maximize the efficiency of the equipment, and service your unit within the mandated guidelines. This warranty applies only to products installed in the United States and Canada.

## EXCLUSIONS

This warranty does not cover any:

1. Shipping, labor, or material charges.
2. Damages resulting from transportation, installation, or servicing.
3. Damages resulting from accident, abuse, fire, flood, alteration, or acts of God (tampering, altering, defacing or removing the product serial number will serve to void this warranty).
4. Damages resulting from use of the product in a corrosive atmosphere.
5. Damages resulting from inadequacy or interruption of electrical service or fuel supply, improper voltage conditions, blown fuses, or other like damages.
6. Cleaning or replacement of filters.
7. Damages resulting from failure to properly and regularly clean air and/or water side of condenser and evaporator.
8. Damages resulting from: (I) freezing of condenser water or condensate; (II) inadequate or interrupted water supply; (III) use of corrosive water; (IV) fouling or restriction of the water circuit by foreign material or like causes.
9. Damages resulting from operation with inadequate supply of air or water.
10. Damages resulting from use of components or accessories not approved by UPG (vent dampers, etc.).
11. Increase in fuel or electric cost.
12. Disposable humidifier pad which will have to be replaced from time to time depending on the amount of use.
13. Disposable media which will have to be replaced from time to time depending upon the amount of use.
14. Inner housing seal.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

SOME STATES DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTY, SO THAT THE ABOVE DISCLAIMER MAY NOT APPLY TO YOU.

SOME STATES ALLOW ONLY A PARTIAL LIMITATION ON IMPLIED WARRANTIES TO LIMIT THE DURATION OF IMPLIED WARRANTIES TO THE DURATION OF THE EXPRESS WARRANTY. IN SUCH STATES, THE DURATION OF IMPLIED WARRANTIES IS HEREBY EXPRESSLY LIMITED TO THE DURATION OF THE EXPRESS WARRANTY ON THE FACE HEREOF.

IN NO EVENT, WHETHER AS A RESULT OF BREACH OF WARRANTY OR CONTRACT, TORT (INCLUDING NEGLIGENCE) STRICT LIABILITY OR OTHERWISE, SHALL UPG BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE OF THE EQUIPMENT OR ASSOCIATED EQUIPMENT, LOST REVENUES OR PROFITS, COST OF SUBSTITUTE EQUIPMENT OR COST OF FUEL OR ELECTRICITY. THE ABOVE LIMITATIONS SHALL INURE TO THE BENEFIT OF UPG'S SUPPLIERS AND SUBCONTRACTORS. THE ABOVE LIMITATION ON CONSEQUENTIAL DAMAGES SHALL NOT APPLY TO INJURIES TO PERSON'S IN THE CASE OF CONSUMER GOODS.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, OR FOR STRICT LIABILITY IN TORT, SO THAT THE ABOVE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

UPG DOES NOT ASSUME, OR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR UPG, ANY OTHER LIABILITY FOR THE SALE OF THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For Owner's Information:

PRODUCT MODEL NO. \_\_\_\_\_ INSTALLATION DATE \_\_\_\_\_  
UNIT SERIAL NO. \_\_\_\_\_ INSTALLING DEALER \_\_\_\_\_

Subject to change without notice. Printed in U.S.A.

Copyright © by York International Corp. 2005. All rights reserved.

**Johnson Controls**  
**Unitary Products**  
5005 York Drive, Norman, OK 73069

Form 715291-UUM-A-1211  
10009605 B2205572A 10.11